


## Double Steel Door

Locate shims and anchors near hinges, except for handle location, locate shims and anchors at the same height on the opposite side.

*The difference between the 2 diagonals shall be equal to or smaller than 1/8" (squared)*

Allow 1/2" space all around doors for insulation purpose.

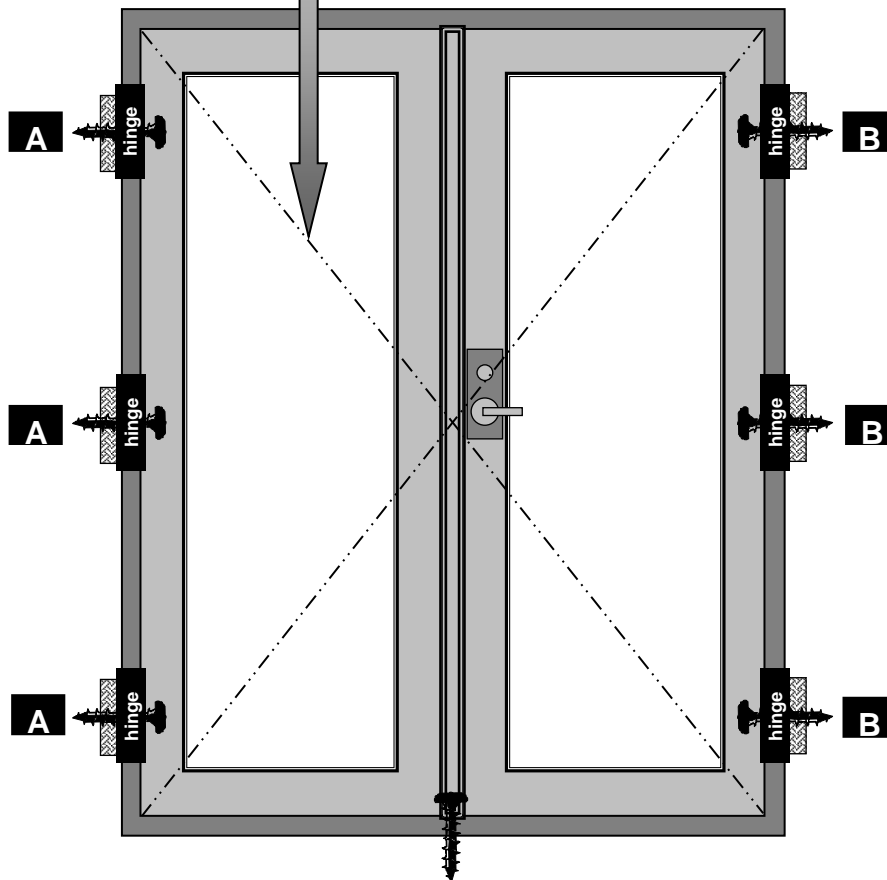

*In all cases, the vertical offset of head versus sill shall be smaller or equal to 1/16" (plumbed)*

*The sill shall be horizontal, the acceptable vertical deviation of one end versus the other is 1/16" (levelled)*

 = Shim

The measurement between the screws **A** and **B** must be the same at the 3 locations.

**DISTRIBUTED BY**